


Trolley

Assembly Instructions EN V1.0

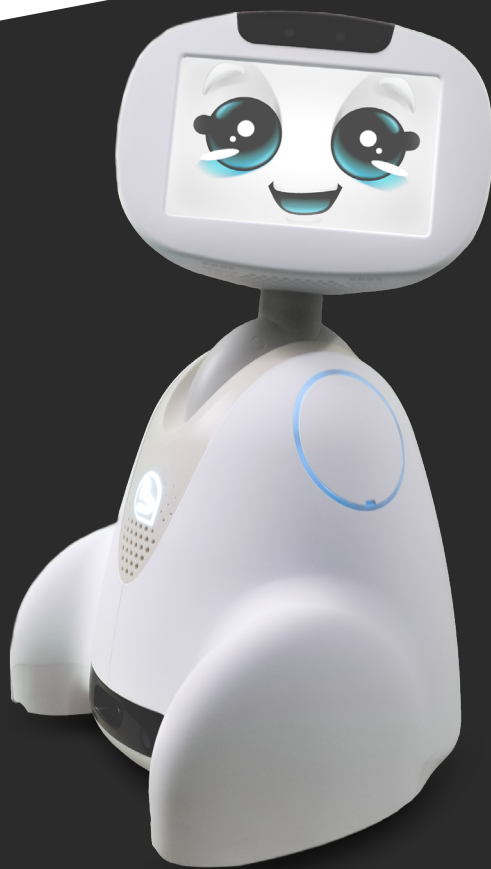


Buddy[®]
The Emotional Robot



1 - SUMMARY



1 - SUMMARY	2
2 - KIT CONTENT	4
3 - ASSEMBLY	6
3.1 - FRAME	7
4.1 - WHEELS	8
4.2 - PLATE	9
4.3 - POUCH	9
4.4 - HOOD	10
4.5 - CONTACT INFORMATION	11

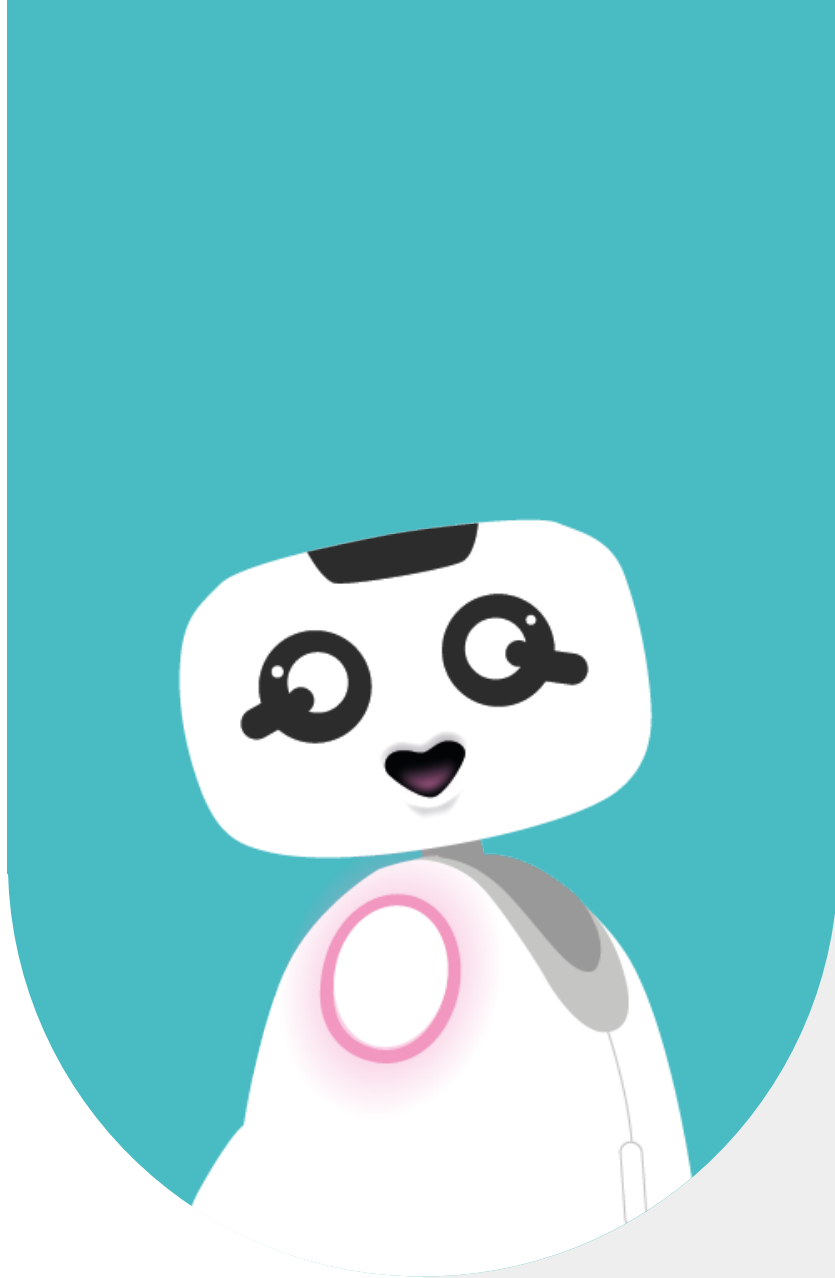

2 - KIT CONTENT



Wheels x2



Shaft + spacers x2




Plate



Hood



Trolley Frame

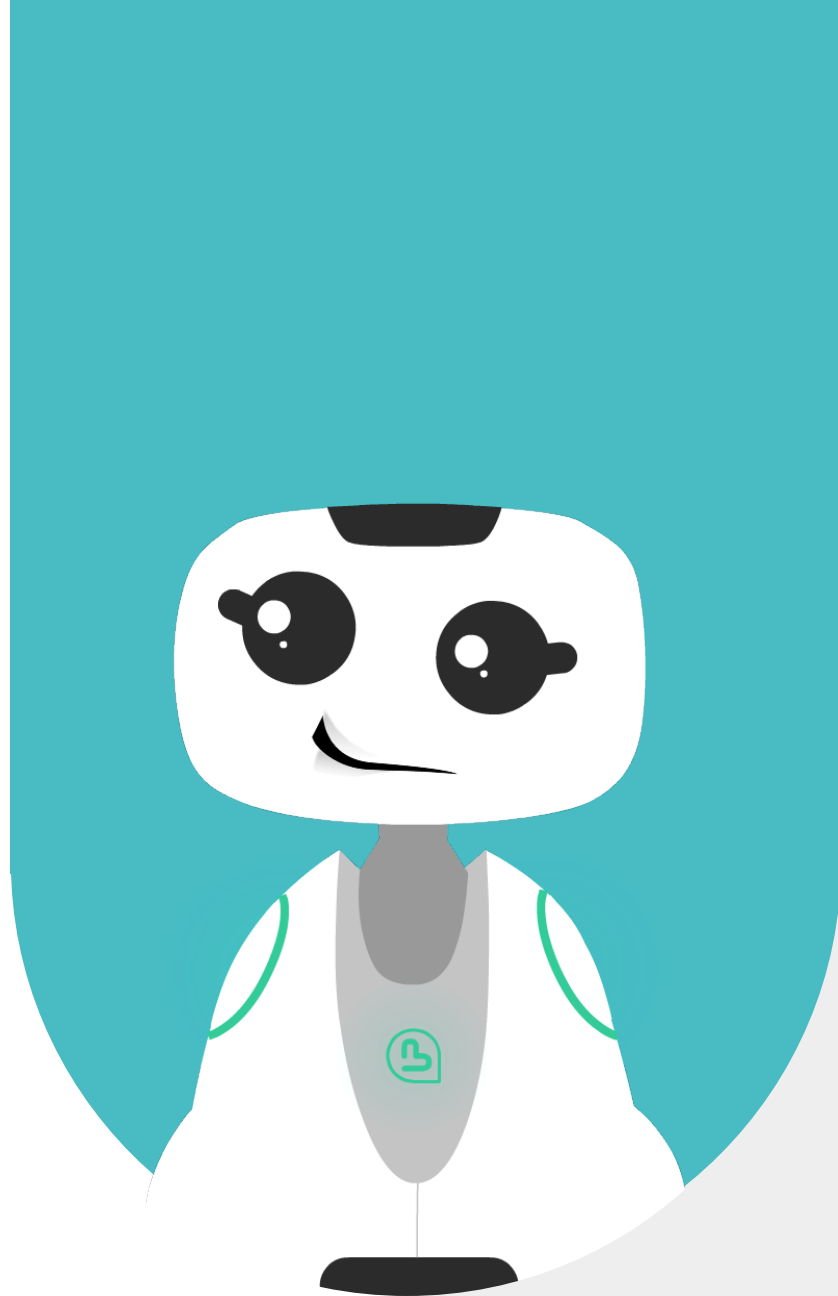

3 - ASSEMBLY

3.1 - FRAME

Unfold the trolley frame

1



Lock the Frame

2




3



4.1 - WHEELS

Insert the shaft and the 2 spacers on the trolley frame

1

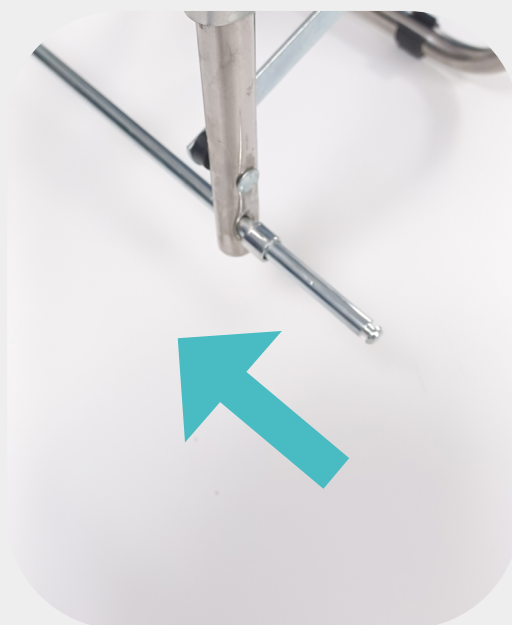


Insert the 2 wheels onto the shaft until the « click »

2



4.2 - PLATE

Clip the plate on the trolley frame

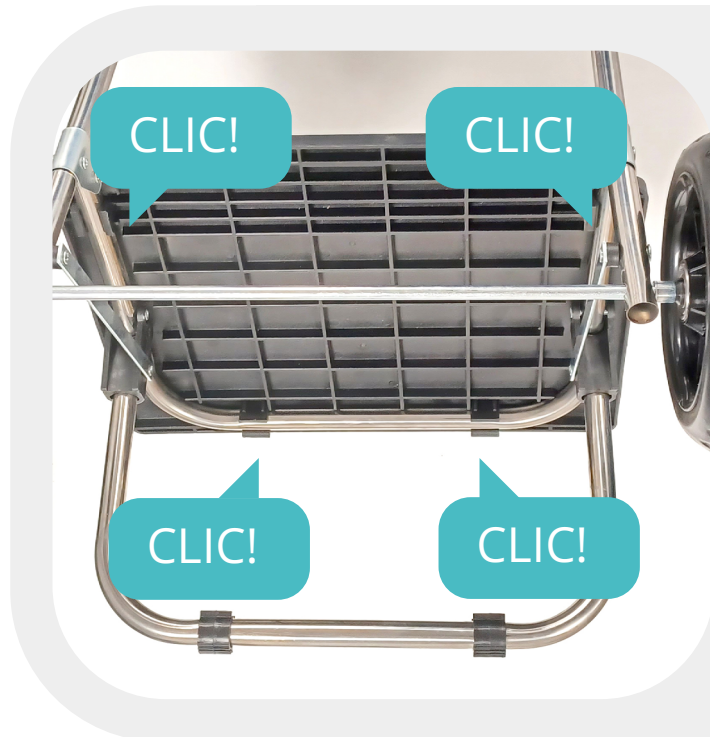

4.3 - POUCH

Remove the pouch from the hood base and fix it at its rear on the hooks and loops


1



1



1

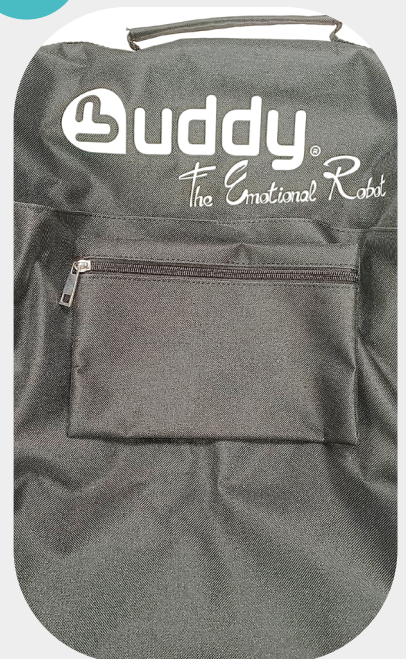

4.4 - HOOD

Pull the hood over the trolley frame



Fasten the belt under the plate and stretch it





4.5 - CONTACT INFORMATION

If you wish to contact us for further information, please refer to the following address:

SUPPORT
support@bluefrogrobotics.com

GENERAL INFORMATION
info@bluefrogrobotics.com